

# Innovations for construction

## LAYING INSTRUCTIONS

### btf-PROCELL F+M

Art. no. 2910



#### 1. Stir

After opening, stir the primer for at least two minutes! You can use either the btf-SYSTEM special primer or btf-PROCELL F+M primer.



Die Primer sind einsatzbereit, wenn die Oberfläche klebrig erscheint.

#### 2. Apply, let dry

With a paint roller of any kind, apply the primer in a thin layer everywhere. The primer should not run. Treat areas of up to 6 m<sup>2</sup> in advance. The primers activate themselves while they are being applied. The primers are considered ready to use when the outer surface no longer appears to be liquid, but rather sticky. The drying time for the btf-SYSTEM special primer is approx. 5 to 10 minutes; for the btf-PROCELL F+M primer, approx. 20-30 minutes.



#### 3. Lay

Cut the btf-PROCELL F+M foil to measure and press it down from top to bottom with the palm of your hand.




#### 4. Lining corners

Always begin in corner areas. Pay special attention to the corner areas.



#### 5. Joining temperature

The joining temperature is a minimum of 130° C and a maximum of 140° C.

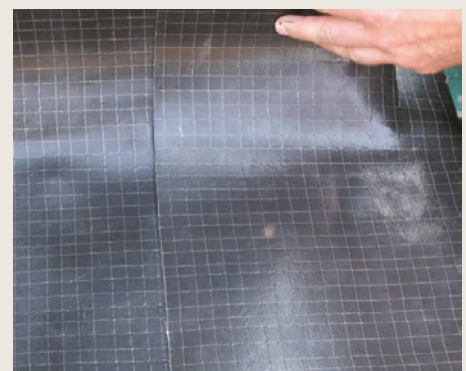

#### 6. Overlapping

The foils must overlap by at least 5 cm.

Steps 7-9 on the following page

# Innovations for construction

## LAYING INSTRUCTIONS

btf-PROCELL F+M · Art. no. 2910



### 7. Joining

Carefully join the foil.



### 8. Connecting strips


In the event of obstacles, cut btf-PROCELL F+M foil with a carpet knife and tape over the cut surface.



### 9. Adhere

Corners and difficult-to-reach parts can be adhered with the connection strips.

With the Z or L stop, the upper edge can be kept safe by using the connecting strips. No border strip is needed!

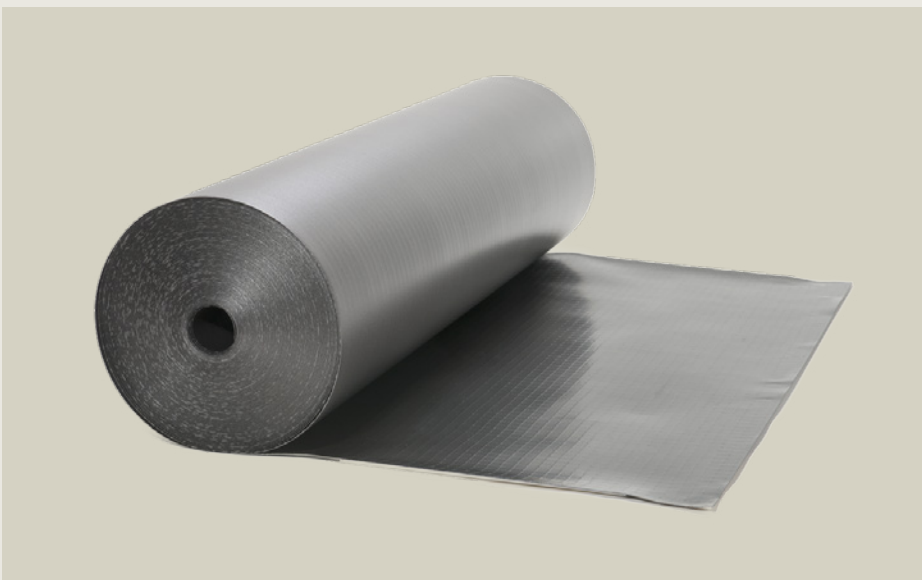

### Any questions?

If you have questions about the use of this product or have technical problems, we would be happy to assist you.

**btf** Innovationen für den Bau GmbH  
Viktor-Frankl-Straße 20  
86916 Kaufering

Phone 0 81 91 - 9 40 40-0  
Fax 0 81 91 - 9 40 40-40

info@btf-innovationen.de  
www.btf-innovationen.de